

ORIGINAL-STYLE SURVIVOR EMERGENCY STOP SWITCHES

Push to run/pull to stop. 2NC-1NO Contacts.

A471A1. Original Style Survivor Stop Switches Mount Horizontal or Corner to Corner. Red Plastic Button, 1/8" High Halo

A471A2. Button and 1/8" High Halo are Aluminum.

A471A3. Button and 1/4" High Halo are Plastic.

A471A4. Vandal-resistant model (Survivor/PLUS) has coined pocket. Horizontal mounting holes are 2 1/8" cc.



NEW-STYLE SURVIVOR EMERGENCY STOP SWITCHES


These Push/Pull STOP switches have 1/8"H and 1 3/8" diameter halos.

| SURVIVOR STOP SWITCHES | | |
|------------------------|-------------------|----------|
| Adams part no. | Action to STOP | Contacts |
| AS459A1 | Push | 2NC 1NO |
| AS459A2 | Pull | 2NC 1NO |
| AS459A5 | Pull | 1NC 2NO |
| AS459A7 | Push | 1NC 2NO |
| AS459A9 | Pull to hold door | 1NC 2NO |

CLASSIC™ EMERGENCY STOP SWITCHES

Push/Pull STOP switches all have 1/8"-high and 1 1/2" diameter halos.

| CLASSIC STOP SWITCHES | | |
|-----------------------|----------------|----------|
| Adams part no. | Action to STOP | Contacts |
| AS459A3 | Push | 2NC 1NO |
| AS459A4 | Pull | 2NC 1NO |
| AS459A6 | Pull | 1NC 2NO |
| AS459A8 | Push | 1NC 2NO |

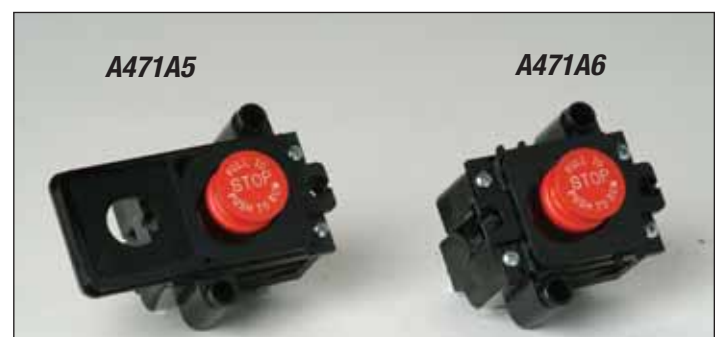

| DESIGNER EMERGENCY STOP SWITCHES (SQUARE HALO) | | | |
|--|-------------------|----------|------------------|
| Adams part no. | Action to STOP | Contacts | w/Braille pocket |
| A471A5 | Pull | 2NC-1NO | Yes |
| A471A6 | Pull | 2NC-1NO | No |
| AS459A13 | Push to hold door | 2NO-1NC | No |
| A471A7 | Push to hold door | 2NO-1NC | Yes |

| HOMELIFT EMERGENCY STOP SWITCHES | | | |
|----------------------------------|----------------|----------|------------------|
| Adams part no. | Action to STOP | Contacts | w/Braille pocket |
| AS459A11 | Pull | 2NO | No |

All "push-to-stop" switches include button guard to prevent accidental activation