



**COMPONENTS FOR ARMOR NO. 3A CONTACTOR**

Adams part no.	Key no.	Description	Armor part no.
<b>ARW2301</b>	1	Copper paddle, 3 <sup>9</sup> / <sub>16</sub> "L; Cd plated	A-164006, 11151-01
<b>ARW2302</b>	2	Cable shunt, 11"L	A-521004, 10742-01, 349-003-5
<b>ARW2303</b>	3	Stat. contact w/screw & wash, 3 <sup>17</sup> / <sub>32</sub> "L	A-164016, 11161-01
<b>ARW2108</b>	4	Contact assembly, complete	B-756006, 10042-01
<b>ARW2304</b>	5	Carbon contact, 1 <sup>1</sup> / <sub>8</sub> " sq.	A-164008, 11153-01
<b>ARW2305</b>	6	Carbon holder, 2 <sup>15</sup> / <sub>16</sub> "L	A-283005, 10698-01
<b>ARW2306</b>	7	T-lug tension spring	A-509023, 10746-01
<b>ARW2307</b>	8	Cup washer, 5 <sup>5</sup> / <sub>8</sub> " dia.	A-171001, 10634-01
<b>ARW2308</b>	9	T-lug, 1 <sup>1</sup> / <sub>2</sub> "L	A-002004, 10030-01
<b>ARW2107</b>	10	Base block T-lug, 1 <sup>3</sup> / <sub>16</sub> "L	A-002002, 10028-01
<b>Kxxxx*</b>	11	Coil (See page 124 for Armor coils)	

\*Make sure you know voltage of application to order correct coil