




**9817219 PB Switch**  
Non Illuminated. Order Lamp  
and Socket 9772662 for 24V  
and 9772819 for 48V



**9893209**  
Lens,  
Target, White

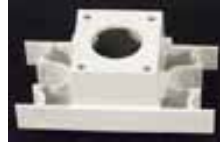

**134AB1**  
Reflector




**129BC1**  
Pushbutton  
Housing



**228AF1**  
Pushbutton  
Actuator



**9851276**  
Pushbutton Mounting  
Bracket (129AC1)

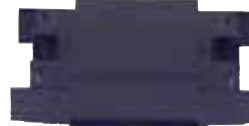

**9893817**  
PB Spacer,  
Blank



**9870258**  
PB Capacitor



**9719398**  
1.25"W Spacer w/Arrow,  
Vertical Mount (132AE5)



**9813135**  
0.625"W Spacer  
w/"R" (131AD-R)



**131AD-BL**  
Spacer, Blank



**131AF1**  
Spacer



**9817190, 171AV1**  
Pushbutton (non-illum.),  
V7, 1 Switch

### LAMPS & HOLDERS



**9711065**  
Lamp Holder



**9711892**  
Hall Station/P.I.  
Lamp Holder with  
Resistor



**9727164**  
Lamp Holder for #161/14V  
and #657/28V Lamps



**9724771**  
6W, T4-1/2 Base, 220V,  
For TIV Button



**9727152, 138AD1**  
Lamp Holder for  
#85 28V Lamp



**9727188**  
PSB Lamp

### EMERGENCY LIGHT COMPONENTS



**9818420**  
Alarm Light



**9863503**  
Reflector

Battery A911-04, Bulb HA-1018-G3