



**GL-902-B2**



**GL-902-B5**



**GL-902-B6**



**GL-902-F1**

Adams part no.	Description	G.A.L. part no.
<b>GL-902-B2</b>	1 <sup>3</sup> / <sub>16</sub> "DIA ACTUATOR ROLLER	CLU1-0036N
<b>GL-902-B5</b>	BRIDGING BLOCK	INT5-0019N
<b>GL-902-B6</b>	INSULATOR	
<b>GL-902-C6</b>	UPPER CONTACT BASE	INT5-0016N
<b>GL-902-D4</b>	INTERLOCK SW ASSY TYPE	INT2H-0007N
<b>GL-902-F</b>	LOWER LINK	INT1H-0026N
<b>GL-902-F1</b>	UPPER BRIDGING BLOCK	INT18-0015N
<b>GL-902-F3</b>	PIN	
<b>GL-902-L9</b>	INTERLOCK ASSY.	INT2H-0002N
<b>GL-902-M7</b>	LOWER CONTACT BASE	INT5-0017N
<b>GL-902-R</b>	MO SWITCH ASSY	INT1H-0013L
<b>GL-902-R2</b>	MOUNTING PLATE	INT2H-0037N
<b>GL-902-S</b>	OPERATOR CONTACT	OP10-0010N
<b>GL-902-T5</b>	CONTACT BASE	
<b>GL-902-Y9</b>	1 <sup>5</sup> / <sub>16</sub> "DIA ACTUATOR ROLLER	CLU1-0037N



**GL-902-D4**  
Interlock Box  
Type MOCP



**GL-902-Y9**



**GL-902-S**

## KEEPER & LOCKING COMPONENTS



**G30B1**




**GL-902-F9**



**GL-902-C7**



**GL-902-D3**

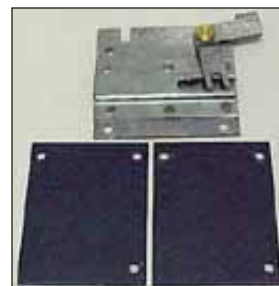

**GL-902-AE1**



**GL-902-Y2**

Adams part no.	Description	G.A.L. part no.
<b>GL-902-AE1</b>	Locking Bar Guide - RH	CLU3-0328R
<b>GL-902-AE8</b>	Locking Bar Guide - LH	CLU3-0328L
<b>GL-902-C7</b>	Door Keeper	INT4-0001N
<b>GL-902-D3</b>	Door Keeper - Double	INT4-0002N
<b>GL-902-F9</b>	Keeper Assy - MOCP	INT2H-0015N
<b>GL-902-D8</b>	Rocker Arm Assy.	INT2H-0010N
<b>G30B1</b>	Keeper Stem Bumper	INT1H-0019N
<b>GL-902-Y1</b>	Locking Bar	
<b>GL-902-Y2</b>	Locking Cam - LH	
<b>GL-902-AA9</b>	Locking Cam - RH	



**GL-902-D8**



**GL-902-Y1**