



GL-917-A5



GL-917-D



GL-917-E



GL-917-F



GL-917-H7



GL-917-Z



GL-917-M



GL-917-M1



GL-917-M9



GL-917-N



GL-917-H9



GL-917-P7



GL-917-N6



GL-917-Y



GL-917-R9

SAFETY EDGE COMPONENTS		
Adams part no.	Description	G.A.L. part no.
GL-917-A5	RUBBER BOOT	
GL-917-D	SAFETY EDGE SWITCH ASSY	SE2-0001R
GL-917-DA	SAFETY EDGE ASSM RH 7FT	SE5-0073N
GL-917-E	PIVOT ARM & LEAF SPRING-UPPER	SE5-0018N
GL-917-F	PIVOT ARM & LEAF SPRING-LOWER	SE5-0020N
GL-917-H7	SAFETY EDGE RH CAM BRKT	SE5-0028R
GL-917-H9	SAFETY EDGE LH CAM BRKT	SE5-0028L
GL-917-M	SAFETY EDGE RETRACT ROD	SE10-0017N
GL-917-M1	BUSHING, SAFETY EDGE	HWBS-0003N
GL-917-M9	BRACKET, LH SAFETY EDGE	SE15-0003L
GL-917-N	SAFETY EDGE ARM SW	SE2-0001L
GL-917-N6	COVER & SCREW	SE2-0003N
GL-917-P7	ANGLE, SAFETY EDGE NOSE	SE5-0016N
GL-917-R5	PIVOT ARM & SPRING	
GL-917-R9	WSHR PKG (RA S.E. SWTCH)	SE2-0007N
GL-917-Y	ROLLER,SAFETY EDGE	SE2-0005N
GL-917-Z	BASE MTG	
GL-928-C6	SAFETY EDGE SUPPORT	CDH1-0020N
GL-600-M	LOWER PIVOT ARM SPRING	SE5-0021N
GL-600-R	UPPER PIVOT ARM SPRING	SE5-0019N



GL-928-C6



GL-600-M



GL-600-R

PHOTO EYE



GL-1088-E
Photo Eye Sensor
Transmitter



GL-1088-F
Photo Eye Sensor
Receiver



GL-918-C
Power Pack