



PUSHBUTTON CHARACTERS (✓ = AVAILABLE FOR THAT SERIES)					
Part no. suffix	Character	Adams part no. series			
		J450	J451	J452	J455
-A	A	✓			
-AB	Arrow, black		✓	✓	
-AG	Arrow, green		✓	✓	
-AL	Alarm	✓			
-AR	Arrow, red		✓	✓	
-B	B	✓	✓	✓	
-BL	Blank	✓	✓	✓	
-C	CALL	✓			
-D	D	✓			
-DC	Door Close	✓	✓	✓	
-DO	Door Open	✓	✓	✓	
-E	Emerg. STOP	✓			
-G	G	✓	✓	✓	
-GR	Ground	✓			
-L	L	✓	✓		
-LL	LL	✓	✓	✓	
-M	M	✓	✓		
-U	Up	✓			
-1R	1 Rear	✓			
-1	1	✓	✓	✓	✓
-2	2	✓	✓	✓	✓
-3	3	✓	✓	✓	✓
-4	4	✓	✓	✓	✓
-5	5	✓	✓	✓	✓
-6	6	✓	✓	✓	✓
-7	7	✓	✓	✓	✓
-8	8	✓	✓	✓	✓
-9	9	✓	✓	✓	✓
-10	10	✓	✓	✓	✓
-11	11	✓	✓		✓
-12	12	✓	✓		✓
-13	13	✓	✓		✓
-14	14	✓	✓		✓
-15	15	✓	✓		✓
-16	16	✓	✓		✓
-17	17	✓	✓		✓
-18	18	✓	✓		✓
-19	19	✓	✓		✓
-20	20	✓	✓		✓

J450-SERIES

J450 is a black "Type E" pushbutton with white characters. It measures 3/4" dia. x 7/8"L. Available only with characters listed.

To order, specify J450 plus the suffix of the characters you need. For example, to order a pushbutton with the word ALARM, ask for Adams part no. J450-AL.

Our J450-E emergency STOP button is red with white characters; 1 1/16"L. Replaces Haughton part no. 19355.

J451-SERIES

J451 (Haughton part number 3-40080-series) is a white "Type H" pushbutton with black characters. It measures 1 3/32" dia. x 1 3/32"L overall.

To order, specify J451 plus the suffix of the characters you want. For example, to order a pushbutton that reads "Door Open," ask for Adams part no. J451-DO.

J452-SERIES PUSHBUTTONS

J452 is a white "Type F" pushbutton w/black characters. It measures 1 1/4" dia. and features a square base.

To order, specify J452 plus the suffix for the character you need. For example, a pushbutton with the character 3, is Adams part no. J452-3.

J455-SERIES PUSHBUTTON ASSEMBLIES

J455 is a black "Type E" momentary pushbutton switch assembly with white characters. Base is impact-resistant Lexan®.

To order, specify J455 plus the suffix for the character you need. For example, to order a pushbutton with the character 11, order Adams part no. J455-11.

NOTE: Uses J450 button.



3-40218-14
"H" Button collar



3-19351-09
"H" Button base



35-1133-005
H-type switch assembly, no resistor
3-40150-54
H-Type Swswitch Assy. w/Resistor



3-40081-36
Pushbutton, ("H") "Emerg Bell"



3-40081-37
Pushbutton, ("H") "Emerg Bell" Red