

MKO, 1" SQUARE



P-14426-8



P-14426-AL

PUSHBUTTON STEMS (1" SQ.)	
Part No.	Pushbutton Marking
P-14426-001	1
P-14426-002	2
P-14426-3	3
P-14426-4	4
P-14426-5	5
P-14426-6	6
P-14426-7	7
P-14426-008	8
P-14426-037	Arrow
P-14426-064	OPEN
P-14426-069	DOOR CLOSE
P-14426-080	blank
P-14426-01R	1R
P-14426-AL	ALARM
P-14426-G	G
P-14426-LB	LOBBY



P-16732-001


PUSHBUTTON & SWITCH ASS'Y. (MKO 1" SQ.)	
Part No.	Pushbutton Marking
P-16732-001	1
P-16732-002	2
P-16732-003	3
P-16732-004	4
P-16732-005	5
P-16732-006	6
P-16732-007	7
P-16732-064	OPEN
P-16732-065	DOOR OPEN
P-16732-068	DOOR CLOSE
P-16732-AR	Arrow
P-16732-BL	blank

PUSHBUTTON LENSES (1" SQ.)	
Part No.	Pushbutton Marking
P-14437-01	1
P-14437-02	2
P-14437-03	3



P-14437-01

P-25989-002
Hall Station Body

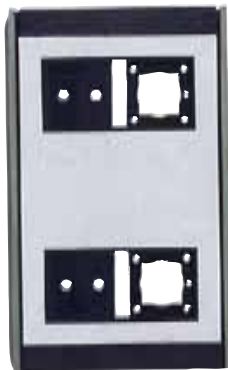

PUSHBUTTON & SWITCH ASS'Y. (MKO 7/8" DIA.)	
Part No.	Pushbutton Marking
P-6440-1	1
P-6440-AR	Arrow
P-6440-CA	CALL
P-6440-DC	DOOR CLOSE



P-6440-AR
Pushbutton, arrow



P-22572-072
STOP switch



P-2050-H72
STOP switch, horizontal



P-2050
Red pushbutton



65974-001 *STOP switch*