





FLOOR SELECTOR PARTS		
Adams part no.	Description	Otis part no.
O310G	Floor selector roller, metal/graphite; 1/2" x 1/2", 0.251" ID	1659
O310C	Floor selector roller, copper; 1/2" x 1/2", 0.251" ID	15387
O311	Floor selector finger; use with O310G & O310C	102990

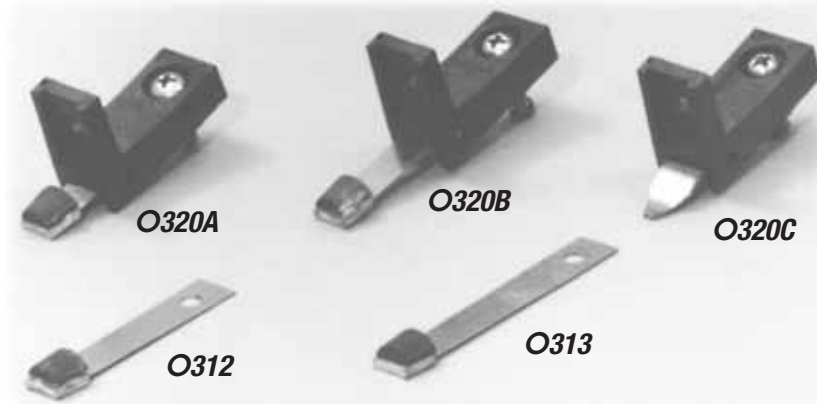


CONTACTS, CONTACT BRUSHES, INDICATOR		
Adams part no.	Description	Otis part no.
O312	Short contact arm, 3/8" x 2"; for O320A brushes	154AD2, AD7
O313	Long contact arm, 3/8" x 2 1/2" for O320B brushes	154AD4, AD8
O320A	Contact brush (incl. O312 short contact arm)	6839D1, D3
O320B	Contact brush (incl. O313 long contact arm)	6839D2, D4
O320C	Indicator with finger	269R1

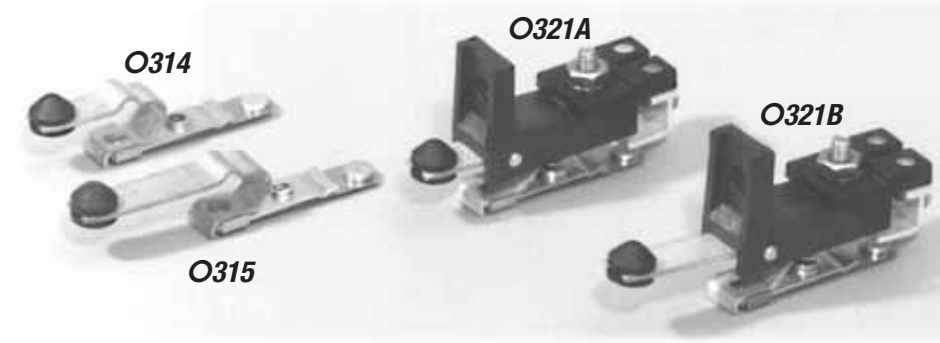

DOOR ZONE ASSEMBLIES		
Adams part no.	Description	Otis part no.
O314	Movable contact for 6839E door zone assembly; incl. short cam arm, 2 1/4"L	150P37
O315	Movable contact for 6839E door zone assembly; incl. long cam arm, 2 3/4"L	150P41
O321A	Door zone assembly with O314 short cam arm	A6839E1
O321B	Door zone assembly with O315 long cam arm	A6839E2

SWITCHES & CONTACT ARMS

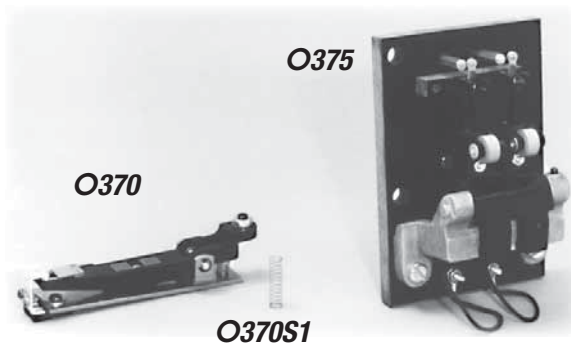

Adams part no.	Description	Otis part no.
O370	Door zone switch for 6104AY selector	6809C1
O370S1	Compression spring for O370	90GA2
O375	Auxiliary stopping switch for 6104AY selector	ML6101AR1



Adams part no.	Description	Otis part no.
O355	Toggle switch for position indicator	7042A1
O363	Upper stop control contact arm for 6851B stop control switch	156H1
O364	Lower stop control contact arm for 6851B stop control switch	156H2
O365	Contact finger and spring guide	156AB2