


ELECTRONIC PUSHBUTTONS (FOR CAR ONLY)*

The buttons have black faces that are ultrasonically-welded into button bases, and white markings. They replace Otis 306KV-series buttons.

O481B-[character] (e.g., **O481B-12** for button with numeral 12).

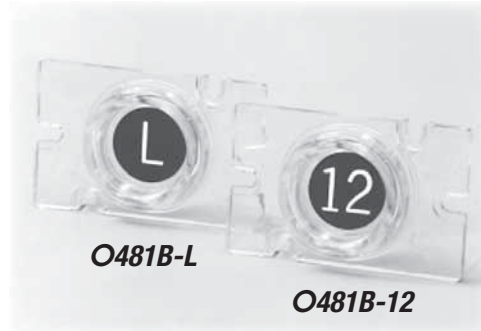

***PLEASE NOTE:**

Touch buttons for hall stations are not available from Adams. Touch buttons are *NOT* intended to be and should *NOT* be installed as a hall component at an elevator entrance. If you need to replace the buttons in your hall station, please consider upgrading to *Survivor/O* buttons.

ELECTRONIC COMPONENTS



O862 solid-state activated switch assembly

65 & 73 TERMINAL BOARDS

Adams part no.	Otis part no.	Description
O876	CSG	Car button
O877	HSJ	Hall button

ASSEMBLY

Adams part no.	Otis part no.	Description
O862	2050 tube 607C1	Solid-state activated switch

ALSO AVAILABLE FOR REPLACING EXISTING TOUCH TUBES



425P1
Otis
Touch Tube
2.18" L x .68 O.D.



425D1
Otis
Touch Tube
4.12" L x 1.56" O.D



425B1
Otis
Touch Tube
3" L x 1.00" O.D.