





MECHANICAL PUSHBUTTON SWITCHES			
Adams part no.	Type of contacts	Button mtl.	Otis part no.
O461A1	Single MAKE	Steel	7035A9, A2
O461A2	Single BREAK	Plastic	7035A25, A23
O461A3	Single MAKE/BREAK	Steel	7035A8, A1
O461A4	Double MAKE (2 switches)	Steel	7035A11, A4
O461A5	Double MAKE/BREAK (2 switches)	Steel	7035A10, A3
O461B1	Single MAKE/BREAK; button = 3/4" dia. x 3/4"L	Tenite	7035A12, A5
O461B2	Single MAKE/BREAK; button = 3/4" dia. x 3/8"L	Tenite	7035A14, A7
O462	Single MAKE w/pilot lamp for O-464 mechanical switch	Steel	7035A28, A27

NOTE: MAKE is normally open and BREAK is normally closed.
O462 includes A487L5 Lamp.

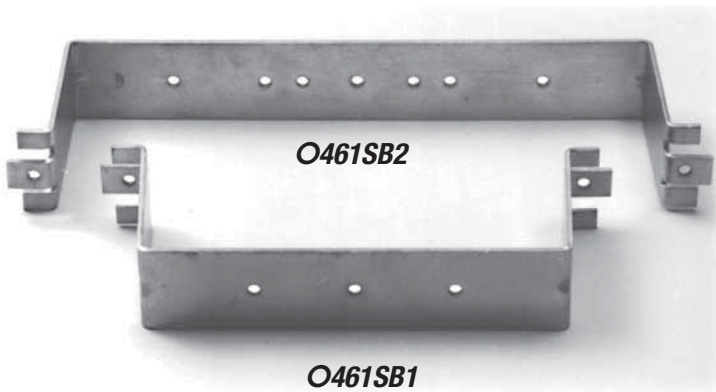

STANDOFF FIXTURES		
Adams part no.	Description	Otis part no.
O461SB1	Mount one (1) O461-series mechanical pushbutton switch; includes 2 spring clips, not shown	6600A83
O461SB2	Mount two (2) O461-series mechanical pushbutton switches; includes 2 spring clips, not shown	6600A80

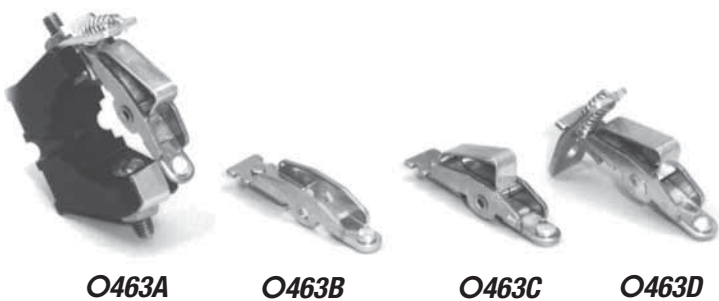

PUSHBUTTON CONTACTS		
Adams part no.	Description	Otis part no.
O463A	Pushbutton ass'y. w/single MAKE contact	6526G1
O463B	Pushbutton contact	150H5
O463C	Pushbutton contact with spring & eyelet	150H7
O463D	Pushbutton contact with spring, eyelet & guide	150H9