



TYPE E-5 INTERLOCK

The exploded diagram at left shows the relationship among the components in each Type E-5 interlock. Key numbers in the diagram correspond to the replacement parts listed in the table below.

On the facing page, you'll find photographs of the component parts, followed by ordering information.

Find the part you need in the diagram at left, then confirm the Adams part no. and part description with the photos at right.

E-5/E-5A INTERLOCK COMPONENTS

Key no.	Adams part no.	Description	Westinghouse part no.
1	W85D1	Nylon drive block	630B424H01
2	W85S1	Drive block spring, 1 ¹⁵ / ₁₆ "L x 7/ ₁₆ "OD	X9KS1H02
3	W85B1	Contact base for stationary contacts	682A226H01
4	W85B2	Contact separator	864A963H01
5	W85C1	Contact bridge ass'y., RH	682A244H01
6	W85C2	Contact bridge ass'y., LH	682A245G01
7	W85L1	Latch lever	196C523H01
8	W85C3	Contact blade with silver contact	682A227G01
9	W85C4	Contact blade support	682A302H01
10	W85K1	Interlock switch in case, complete; RH	196C527G01
11	W85K2	Interlock switch in case, complete; LH	196C527G02
12	W85A1	Drive block ass'y., complete; RH	5194D85G01
—	W85A2	Drive block ass'y., complete; LH	5194D85G02
14	W85M1	Mounting bracket for W85K1/K2, single bend	197C567H01
15	W85M2	Mounting bracket for W85K1/K2, double bend	197C534H01
16	W85M3	Mounting bracket for W85K1/K2, triple bend	197C534H03