

Magnatek

PRINTED CIRCUIT BOARDS

MAG-46S02489-0010	GATE FIRING PCB
MAG-46S02489-1011	GATE FIRING PCB 2 CHL(MAGNETEK 300HP DRV
MAG-46S02975-0403	MAG MAIN PCB
MAG-46S02976-0010	ARMATURE INTERFACE PCB 25 & 50 A
MAG-46S02976-0020	ARMATURE INTERFACE PCB 100A
MAG-46S02976-0030	MAG AMRMTURE INTERF (DSD412,190A)MAG-2
MAG-46S02976-0032	MAGNETEK BOARD
MAG-46S03017-0010	MAG PC BRD SNUBBER (DSD412-190A)MAG-4
MAG-46S03020-0030	SNUBBER PCB 100A
MAG-46S03046-0010	MAG PC BRD FIELD INTERF 1.9A (MAG-5)
MAG-46S03046-0030	MAG PC BRD FIELD INTERF 6.9A (MAG-6)
MAG-46S03046-0050	MAG PC BRD FIELD INTERF 16A (MAG-7)
MAG-46S03046-0060	MAG PC BRD FIELD INTERF 24A (MAG-8)
MAG-46S03046-0070	MAG PC BRD FIELD INTERF 30A (MAG-9)
MAG-46S03046-0080	MAG PC BRD FIELD INTERF 48A (MAG-10)
MAG-46S03046-0500	PC BOARD FIELD INTERF 16A
MAG-46S03088-0010	MAG ARMATURE INTERFACE 300A MAG-13
MAG-46S03089-0010	SNUBBER PCB 300A
MAG-46S03192-0010	SNUBBER PCB/511 CONT AMP MODEL
MAG-46S03192-0020	SNUBBER PCB/681-1363 CONT. AMP MODEL
MAG-46S03192-1020	SNUBBER PCB MAGNETEK 300HP/DSD412 DRIVE
MAG-46S03373-0010	ARMATURE INTERFACE PCB
MAG-46S03375-0010	SHUNT INTERFACE PCB
MAG-46S03594-0010	PC BRD FIELD INTERF 1.9A



MAG-46S02489-1011



MAG-46S03192-1020



MAG-05P00607-0016



MAG-05P00630-0013



MAG-05P00050-0523



MAG-46S03214-0010



MAG-05P00017-0361



MAG-05P00017-0366

RELAYS AND CONTACTORS

MAG-05P00031-0156	CONTACTOR DC 110VAC (MAGNETEK 300HP DRV)
MAG-05P00036-0312	RELAY,110VAC (MAGNETEK 300HP DRIVE)
MAG-05P00607-0015	CONTACTOR DB 220VDC (MAGNETEK 300HP DRV)
MAG-05P00607-0016	PILOT CONTR,110VAC (MAGNETEK 300HP DRIVE)
MAG-05P00630-0013	RELAY,110VAC (MAGNETEK 300HP DRIVE)

DIODES AND RECTIFIERS

MAG-05P00050-0328	RECTIFIER,70A,1600V(MAGNETEK 300HP DRIVE
MAG-05P00050-0410	RECTIFIER Q1-Q6(DSD412 DRIVE 100A)
MAG-05P00050-0412	RECTIFIER Q1-Q6 (DSD412 DRIVE 190A)
MAG-05P00050-0442	DIODE BRIDGE Q7 (DSD412 DRIVE)
MAG-05P00050-0461	RECTIFIER (SCR) (MAGNETEK DRIVE)
MAG-05P00050-0523	DIODE BRIDGE Q7 (DSD412 DRIVE)
MAG-46S03214-0010	RECTIFIER Q1-Q12 (DSD412 DRIVE 300A)

FUSES

MAG-05P00017-0031	FUSE 40A 600V (MAGNETEK 300HP DRIVE)
MAG-05P00017-0073	FUSE 15A 250V (MAGNETEK 300HP DRIVE)
MAG-05P00017-0166	FUSE F1-F3 (DSD412 DRIVE 100A)
MAG-05P00017-0179	FUSE FWP 200A (DSD412 DRIVE 100A-F4)
MAG-05P00017-0214	FUSE FWP 700A 700V BUSSMANN (MAGNETEK)
MAG-05P00017-0234	FUSE F1-F3 (DSD412 DRIVE 300A)
MAG-05P00017-0235	FUSE F4 (DSD412 DRIVE 300A)
MAG-05P00017-0348	FUSE 5A 700V (MAGNETEK 300HP DRIVE)
MAG-05P00017-0361	FUSE 7.5A 600V (MAGNETEK 300HP DRIVE)
MAG-05P00017-0366	FUSE FWP 300A (DSD412 DRIVE 190A - F4)

POWER SUPPLIES & TRANSFORMERS

MAG-05P00090-0293	POWER SUPPLY A4 (MAG-1) (MAGNETEK DRIVE)
MAG-05P00217-0012	CURRENT TRANSF U1 (DSD412 DRIVE 190A)
MAG-05P00217-0013	CURRENT TRANSF U1 (DSD412 DRIVE 100A)
MAG-05P00217-0020	CURRENT TRANSF U1 (DSD412 DRIVE 300A)
MAG-05P00645-0018	CURRENT TRANSF U1 W/O KIT (DSD412 DRIVE)

MISC.

MAG-05P00015-0016	FILTER,AIR CAB. 10X10"(MAGNETEK 300HP DR
MAG-05P00015-0017	FILTER,AIR CAB. 10X20"(MAGNETEK 300HP DR
MAG-05P00016-0008	FAN B1 (DSD412 DRIVE 300A)
MAG-05P00016-0012	FAN B1 (DSD412 DRIVE 190A)
MAG-05P00016-0041	FAN, DRIVE (MAGNETEK 300HP DRIVE)
MAG-05P00016-0048	FAN B1 (DSD412 DRIVE 100A)
MAG-05P00217-0029	CURRENT XDUC 500A (MAGNETEK 300HP DRIVE)
MAG-05P00218-0023	THERMISTER RT1 (DSD412 DRIVE)
MAG-05P00632-0002	SENSOR,DC ADJUST. (MAGNETEK 300HP DRIVE)
MAG-46S03373-0611	ARM. INT. ASSY 600V(MAGNETEK 300HP DRIVE
MAG-46S03397-0010	FIELD ASSY (MAGNETEK 300 HP DRIVE)



MAG-05P00016-0012



MAG-05P00016-0041



MAG-05P00090-0293



MAG-05P00217-0012



MAG-05P00217-0029



MAG-05P00632-0002