

# Reliance

BRUSHES & HOLDERS	
<b>RL-1018-A1</b>	BRUSH, GRADE 5410 STYLE 2QP3
<b>RL-1018-A2</b>	BRUSH GRADE N6000, 61041072
<b>RL-1018-AX</b>	BRUSH, 61000528, GRADE SA454
<b>RL-1018-AX</b>	BRUSH, 61000528, GRADE SA454
<b>RL-1018-AXL</b>	BRUSH, ADV CARBON L-0112 21T1
<b>RL-1018-B</b>	BRUSH,GENERATOR, 61000667
<b>RL-1018-CX</b>	BRUSH, SPLIT GENERATOR, 6100
<b>RL-1018-D</b>	BRUSH, 63000945, GRADE SA45
<b>RL-1018-H</b>	BRUSH, SPLIT, 61000883
<b>RL-1018-I</b>	BRUSH, 61000601, GRADE SA45
<b>RL-1018-JX</b>	BRUSH, 61000530, GRADE SA454
<b>RL-1018-K</b>	BRUSH 61000616 GRADE SA454
<b>RL-1018-K1</b>	BRUSH, .437X1.50X2,SA4548 (6 21T
<b>RL-1018-KX</b>	BRUSH, 61000355, GRADE SA454
<b>RL-1018-M</b>	BRUSH, 61001438, GRADE SA45
<b>RL-1018-S</b>	BRUSH, 61000410, GRADE SA45
<b>RL-1018-TX3</b>	BRUSH, 61040273,N5000
<b>RL-1018-W</b>	BRUSH, 13-371021, GRADE 5410
<b>RL-1230-A</b>	HOLDER, BRUSH
<b>RL-1230-B</b>	HOLDER, BRUSH
<b>RL-1230-C</b>	BRUSH HOLDER 74732R
<b>RL-1230-JX</b>	BRUSH HOLDER
<b>RL-1230-KX</b>	BRUSH HOLDER, NLA 6/00
<b>RL-1230-R</b>	BRUSH HOLDER WITH ADAPTER 3#




**RL-1018-A1**




**RL-1018-A2**



**RL-1018-AX**

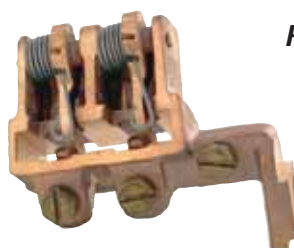


**RL-1230-A**

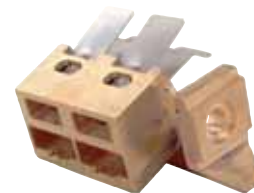

**RL-1230-JX**



**RL-1230-B**

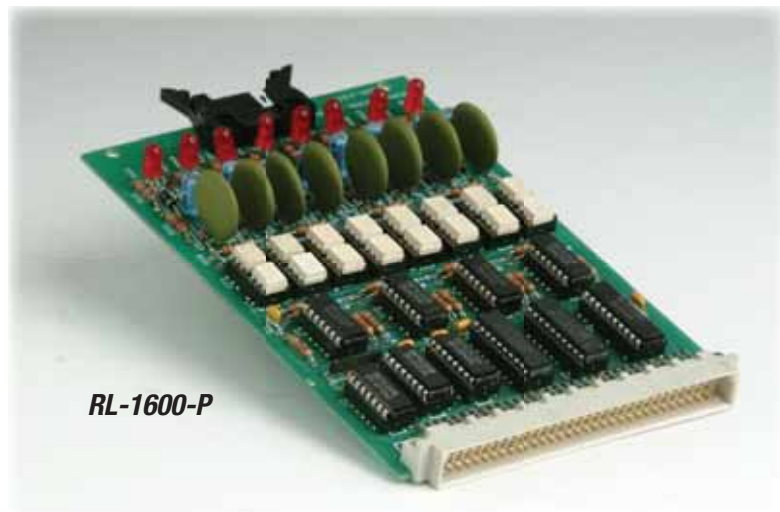

**RL-1600-P**

PRINTED CIRCUIT BOARDS	
<b>RL-1600-C</b>	SCR MOTHER BOARD
<b>RL-1600-D</b>	REL HEATSINK-SCR DC DRIVE 41
<b>RL-1600-P</b>	SIGNAL INTERFACE BOARD O-58705
<b>RL-1600-T</b>	REGULATOR BOARD O-56929-120A
<b>RL-1600-X</b>	DRIVER INTERFACE BOARD O-58704 D

MISC.	
<b>RL-1600-M</b>	PLASTIC GUIDE
<b>RL-1600-Z</b>	TRANSDUCER 600595-8A
<b>RL-2263-10</b>	BEARING, BALL
<b>RL-2263-3</b>	BEARING, ROLLER
<b>RL-2263-4</b>	BEARING ASSM COMMUTATOR EN
<b>RL-2263-5</b>	BEARING ASSM OUTPUT SHFT EN
<b>RL-2263-6</b>	BEARING, BALL
<b>RL-2263-A1</b>	BRUSH RING ASSEMBLY
<b>RL-2263-C7</b>	RELIANCE TACH COUPLING
<b>RL-2263-D2</b>	BEARING Reliance MG 416821-2
<b>RL-2263-D9</b>	DOOR MOTOR