

ELEVATOR 101 MAINTENANCE

Elevator and escalator maintenance isn't a matter of if, but when.

Unexpected breakdowns are always a possibility, but staying on top of maintenance and watching for clues of wear can go a long way toward prevention.

Hydraulic elevators

Focus on fluids

- Check your oil reservoir regularly for impurities or degradation
- Use oil designed for your equipment
- Replace oil per the manufacturer's recommendations
- Check for a burnt-oil smell—this might mean you need an oil cooler

Prioritize pistons

- Check for scratched or worn pistons
- Check for cylinder leakage
- Check associated parts for wear (jack packing and synchronization cables or chains)
- Install a piston-gripper or a burst valve to prevent free falls

Traction elevators

Stay smooth

- Maintain proper lubrication
- Check sheave grooves and regroove, repair or replace as needed
- Check to ensure adequate brake lining

Ready the ropes

- Inspect ropes for wear, fraying or oxidation (rouging)
- Measure rope diameter with a go/no-go rope gauge
- Lubricate traction ropes regularly
- DO not lubricate governor ropes—if lubrication or leakage occurs, replace them

Hoist way, pit areas and overheads

Keep things clean

- Clean pit areas
- Watch for debris and spilled oil
- Ensure all rails and guides for the car and counterweight are clean and solid

Secure safely

- Buffers must be secured in position.
- Check traveling cables and ensure cable attachments are secured in place
- Ensure the presence and operation of smoke detectors and sprinklers

When to replace

Here are a few key parts that commonly need replacement—and how to know when it's time.

Replace rollers if ...

- They make noise
- You notice poor mechanical door action

Replace the door clutch if ...

- It doesn't engage the hoist doors properly
- The door restrictor is not functioning

Replace the door gibs and fire tab if ...

- They are missing or worn

Replace fixture buttons if ...

 
- They are worn to the point of illegibility
- They do not light

Replace jack seals if ...

- There is leakage
- If there is "grabby" action

Replace car guide shoes

- They are worn or missing

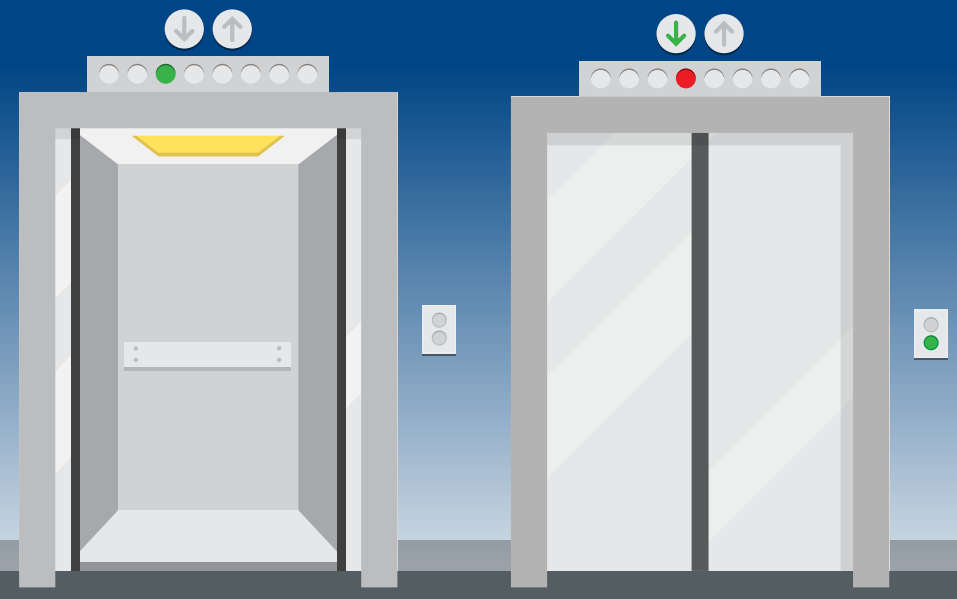

Hoist way and car doors, operators and car top

Mind the doors

- Inspect the door gibs for wear or damage
- Ensure doors operate smoothly without excessive noise
- Check car door opening and closing speed
- Ensure closing force complies with local codes
- Hoist way doors must close completely (ensure spirators or other closing devices are working correctly)
- Inspect door operator arms and linkage and door clutches, relating cables and pulleys for wear and damage
- Ensure proper operation of door restrictors and hatch door interlocks

Keep up with car top

- Ensure a proper car-top maintenance station
- Ensure all car-top buttons and work light bulbs are functional
- Ensure proper latching of car-top exits (from the top side only)

Hallway Fixtures Car Operating Panel

Keep things lit and legible

- Buttons must be functioning—illuminated when pressed and not stuck in place
- Ensure labels are clearly visible
- Position indicators and lanterns should illuminate and display correctly
- Key switch lock plate labels should be present and legible; check for debris in key slots

Audit audio equipment

- Ensure the emergency communication device is properly labeled and functioning
- Check the audio messaging unit if so equipped



More Parts. Delivered Faster.

It's not only the ADAMS slogan, but a way of doing business. We have the most extensive inventory of parts, for installations new and old, and more than 97 percent of them ship the same day from our state-of-the-art distribution center. **Visit adamselevator.com to learn more.**